




Einlegen der Etiketten

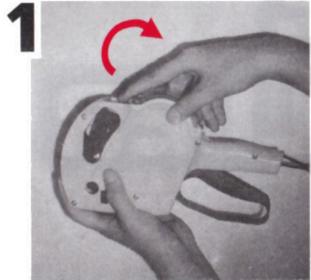


Schutzklappe in Pfeilrichtung öffnen

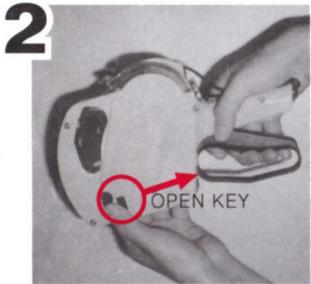



Drücken Sie auf beiden Seiten die Entriegelungs-Hebel, um die beiden Klappböden zu öffnen.

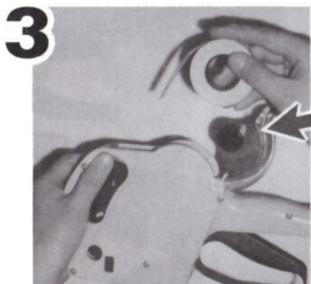


Legen Sie die Etikettenrolle In die Schutzklappe ein.

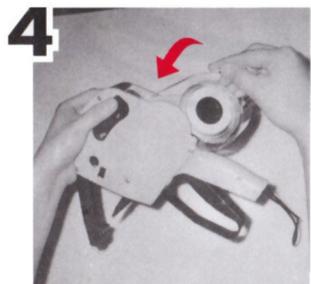



Führen Sie die Etiketten so weit durch das Gerät, dass die Etiketten ca. 10 cm aus dem Gerät herausragen.

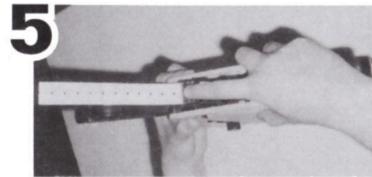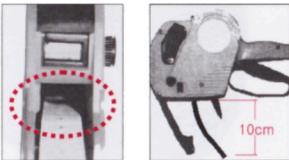

Schließen Sie den inneren Klappboden.

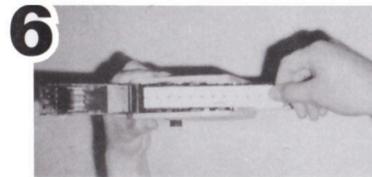

Legen Sie die Etiketten gemäß Abbildung auf Führungsrolle.

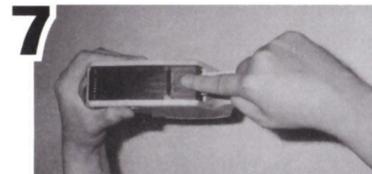
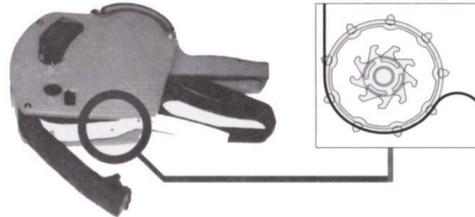


Schließen Sie die äußere Klappe.


8 Nach 2-3 maliger Betätigung des Hebels werden die Etiketten gespendet.




Wechsel der Tuscherolle

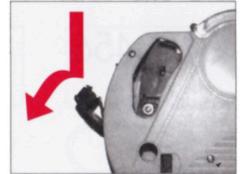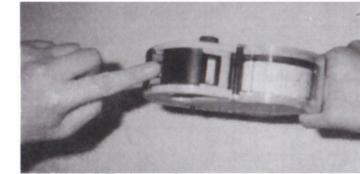

Drücken und ziehen Sie an dem vorderen geriffelten Teil, () um das Tuscherollenfach zu öffnen.

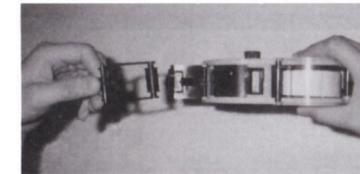


Entnehmen Sie den Tuscherollenhalter und wechseln Sie die Tuscherolle gemäß Zeichnung.

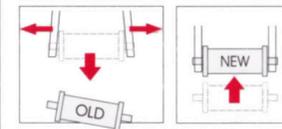


Zahleneinstellung


Ziehen Sie die Einstellachse heraus, bis der Pfeil auf die zu ändernde Ziffer zeigt. Einstellachse drehen, bis die gewünschte Ziffer erscheint. Wenn die Bändereingestellt sind, Einstellachse zurückschieben.

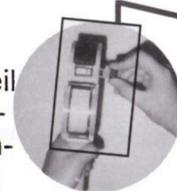


PRICE LABELLER
HOW TO OPERATE HAND LABELLER

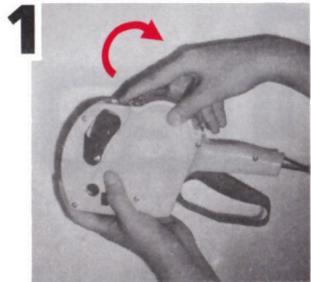



DRAW OUT LABEL CASE LIKE ARROW.

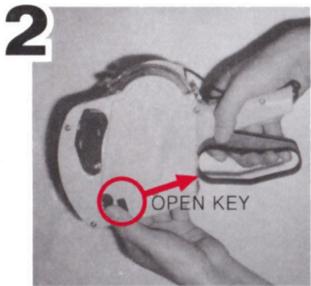


PULL BACK "BASE PLATE OPEN KEY" ON BOTH SIDES LIKE ARROW TO OPEN BASE PLATE AND PLATE COVER.

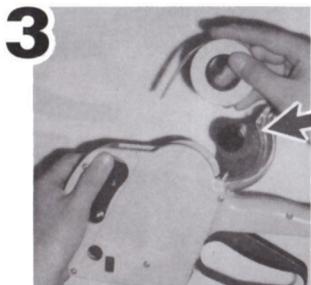


LOAD LABEL ROLL ONTO LABEL CASE.

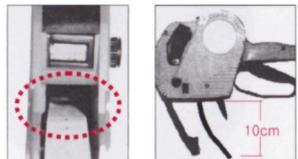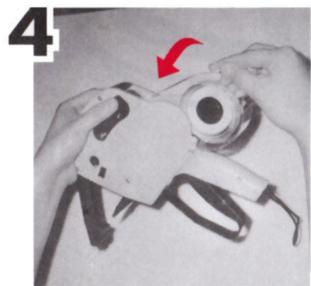



INSERT LABEL ROLL BETWEEN BASE PLATE AND PLATE COVER ALLOWING 10cm LENGTH OUT THE BOTTOM.

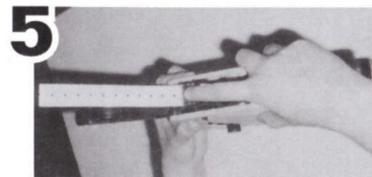


CLOSE BASE PLATE.

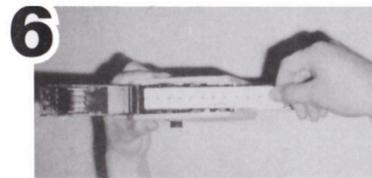

LINE UP HOLE OF (O) FEED ROLLER.

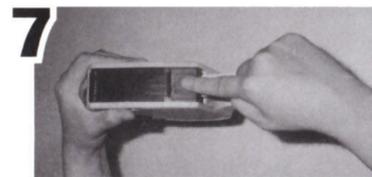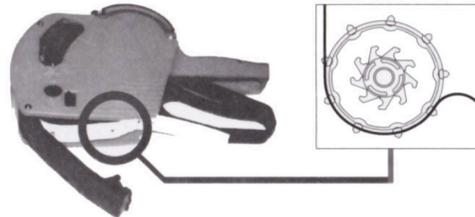


CLOSE THE BASE PLATE COVER TAKING CARE NOT TO DETACH LABEL FROM FEED ROLLER.


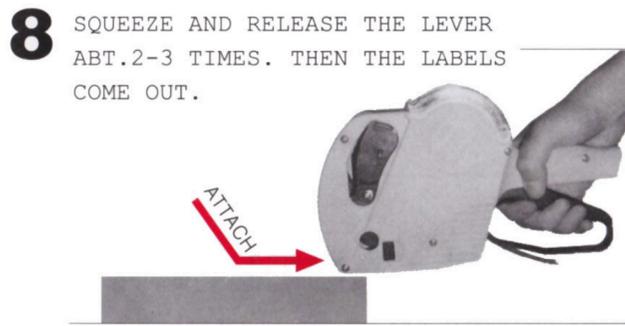


ATTACH LABEL ONTO DESIRED PLACE OF PRODUCT.



PRICE LABELLER
HOW TO CHANGE INK ROLLER

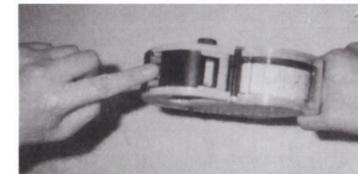

PRESS AND PULL () PART TO OPEN INK ROLLER CASE.

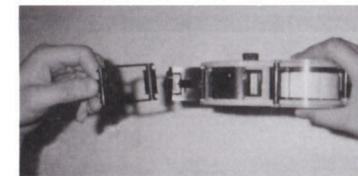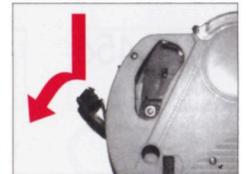


 PULL INK ROLLER HOLDER BY A GRIP AND REPLACE OLD INK ROLLER WITH NEW ONE.

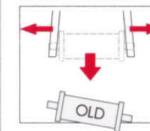

WIDEN THE SPACE BETWEEN INK ROLLER HOLDERS A GRIP AND TAKE OUT OLD INK ROLLER WITH NEW ONE.

PRICE LABELLER
SETTING THE LETTER HEAD

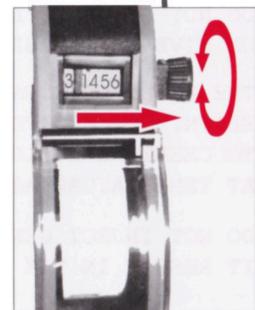

PULL OR PUSH THE DIAL SHAFT TO THE DESIRED BAND AND ROTATE THE SHAFT IN EITHER DIRECTION. WHEN BANDS ARE SET. PUSH THE DIAL SHAFT INWARD.

Price labeller *Junior*

UNFASTEN BOLT ON EACH SIDE OF LETTER HEAD.
MOVE THE BOLT BACK AND FORTH AND BOLT ON.


123456

123456

123456



SINCE PRINTING POSITION HAVE BEEN ADJUSTED WHEN
THE GOODS ARE SENT OUT.
DO NOT CHANGE THE POSITION AS MUCH AS POSSIBLE.

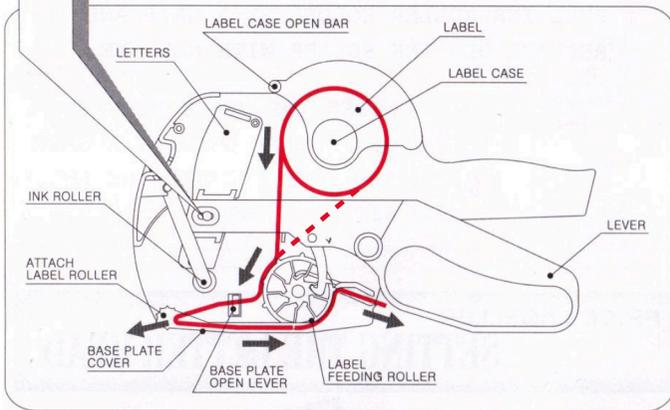

Betimax AG

Martisweidweg 2

CH-6405 Immensee


www.betimax.ch

info@betimax.ch

Betimax[®]

Labelling has a name

Junior

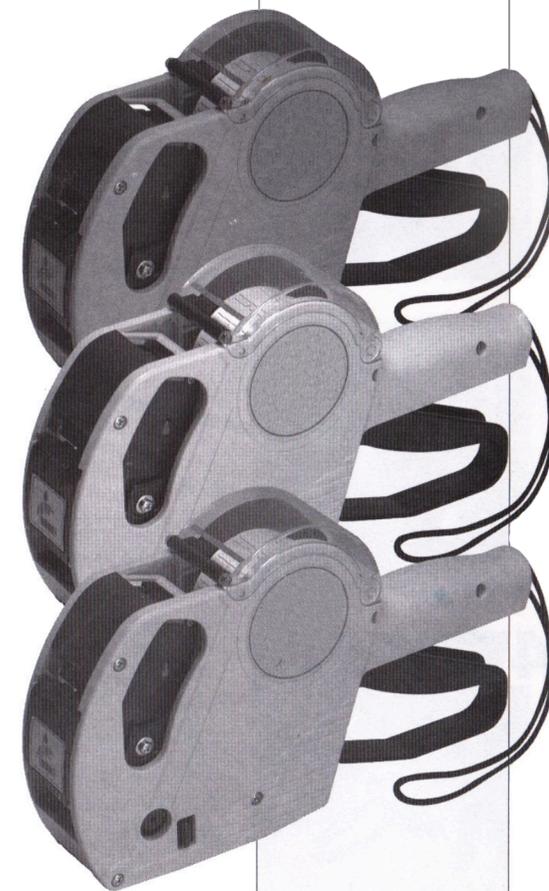

telefono **0800 84 00 86** fax **0800 84 00 87**
free TELEPHONE with Betimax free FAXING to Betimax